

SAVE THESE INSTRUCTIONS

- 1. When you connect AC power to the fixture, it will automatically initiate an autotest. This will do the following:
 - (a) Verify the battery disconnection, charger board failure every 5 seconds
 - (b) Issue 1 minute autotest every month
 - (c) Issue 30 minute autotest every 6 months after installation
 - (d) Issue 90 minute autotest every 12 months after installation
- 2. Dual color LED lamp indicator shows the following status:
 - (a) Green color On / Ready
 - Blinking / Testing
 - (b) Red color (Service Alert)
 - (c) Service Alert LED Code (Red color, LED lamp indicator)

•	One blink, 4 second pause	Battery is not connected
• •	Two blinks, 4 second pause	Battery voltage too low
• • •	Three blinks, 4 second pause	Charger board circuit failure
• • • •	Four blinks, 4 second pause	Transfer function failure
•••••	Seven blinks, 4 second pause	LED strip failure

NOTICE

After you've fixed the problem with the fixture, please press and hold the test button for 2 seconds to reset it. The LED indicator will show green.

3. Autotest also has a manual test function. Press test button to do the following:

Press test button once	30 seconds discharge test
Press test button twice within 2 seconds	3 minutes discharge test
Press test button 3 times within 2 seconds	30 minutes discharge test
Press test button 4 times within 2 seconds	90 minutes discharge test