

INSTALLATION INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

- 1) *The LLCP-C series driver is designed for both factory or field installation only when determined to meet the as installed egress requirements as outlined on page 4 of these instructions.*
- 2) *Installation should be performed by qualified personnel only.*
- 3) *Install in accordance with the National Electric Code and applicable local codes.*
- 4) *The LLCP-C series requires an unswitched AC power source of 120 to 277 volts, 50/60 HZ.*
- 5) *The LLCP-C series is suitable for use in dry and damp location where ambient temperature is 10 to 55°C.*
- 6) *The LLCP-C series driver should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.*
- 7) *The LLCP-C series driver is suitable for use only with LED lamps having an operating voltage of 20 Vdc minimum, 50 Vdc maximum and will provide 90 minutes of emergency operation.*
- 8) *To reduce the risk of electrical shock, do not connect LLCP-C series driver's converter connector until installation is complete and AC power is applied to the luminaire.*
- 9) *The LLCP-C series driver has more than one power source. To reduce the risk of electrical shock, remove the normal AC power source(s) to the luminaire and disconnect the LLCP-C series driver's converter connector before servicing.*
- 10) *The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition and will void warranty.*
- 11) *Do not use this equipment for other than intended use.*
- 12) *Do not mount near gas or electric heaters.*
- 13) *Servicing of this equipment should be performed by qualified personnel only*
- 14) *The LLCP-C series driver is a sealed unit. Components are not replaceable. Replace entire unit when necessary.*
- 15) *The LLCP-C series driver comes with a sealed rechargeable NiCad battery that must be recycled properly. Do not attempt to service the battery.*

SAVE THESE IMPORTANT SAFETY INSTRUCTIONS


The installation and use of this product must comply with all national, federal, state, municipal, or local codes that apply. Please read this manual thoroughly before installing or operating LLCP-C Series Emergency LED Drivers.

INSTALLATION INSTRUCTIONS

CAUTION: Before installing, make certain the AC power is off and the **LLCP-C series** driver's converter connector is disconnected.

1. MOUNTING THE EMERGENCY LED DRIVER

When used with ceiling-mounted downlight fixtures, the **LLCP-C series** driver should be mounted on the fixture above the ceiling. The flex conduit marked "A" should be wired into the AC driver compartment or to an electrical junction box on the fixture which allows access to the driver/LED load connection. Refer to Figures 1, 2 and 3.

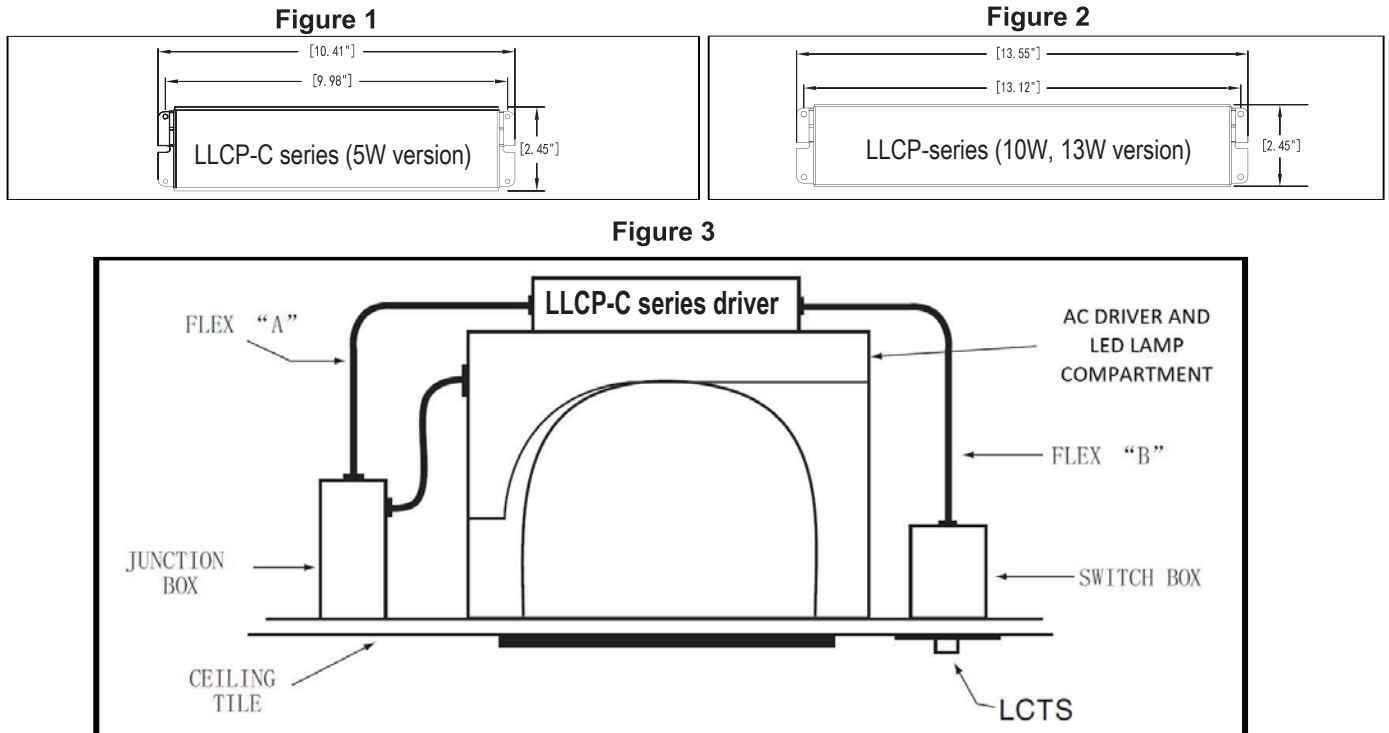

2. WIRING THE LLCP-C DRIVER

Perform all wiring with the exception of the Violet and Brown wires. Note: Wiring must be performed in accordance with the National Electric Code and applicable local codes. Consult Customer Service for additional wiring diagrams.

Refer to Figure 4.

Caution: Use only with LED driver with Output current less than 2.5A.

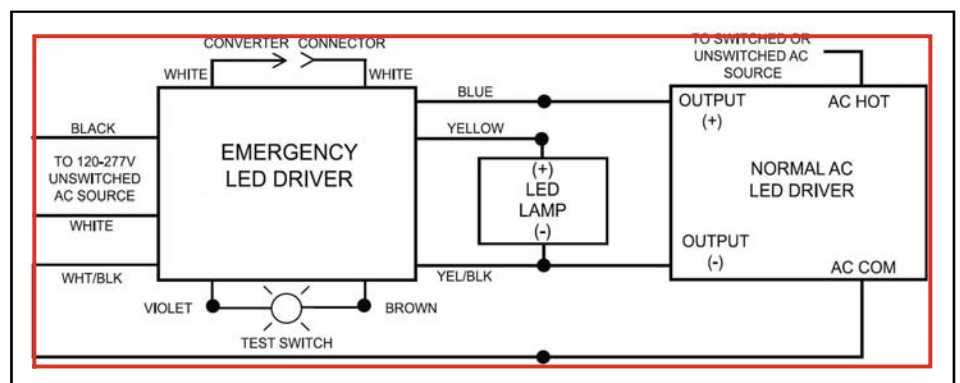


Figure 4

3. INSTALLING THE LED COMBO TEST SWITCH (LCTS)

Cut the single gang switch box (not provided) into the ceiling tile adjacent to the fixture within reach of the **LLCP-C series** driver's flex marked "B". After mounting the switch box, connect flex "B" to the box and route all leads inside the box. Refer to Figure 3 for typical mounting.

Mount the LCTS on the test switch plate and secure using the plastic nut. Connect the wires from the **LLCP-C series** driver to the LCTS (Violet to Violet, Brown to Brown). Attach the test switch plate to the switch box using screws provided.

4. WIRING THE AC INPUT

- A) The LLCPC series driver and AC LED Driver must be on the same branch circuit.
- B) The LLCPC series driver requires an unswitched AC power source of 120 to 277 volts.
- C) When the LLCPC series driver is used in a switched luminaire, the AC input to the LLCPC series driver must be connected to ahead of the luminaire switch (line side of luminaire switch).

Refer to Figure 3.

5. COMPLETING INSTALLATION

When the installation is complete, switch the AC power ON and join the LLCPC series driver's converter connector.

Refer to Figure 3.

OPERATION

Normal Mode – AC power is present. The AC LED Driver operates the LED lamp(s) as intended. The LCTS will be illuminated indicating that the LLCPC series driver is in the standby charging mode.

Emergency Mode – AC power fails. The LLCPC series driver senses the AC power failure and automatically switches to Emergency Mode. One or multiple LED lamps will be illuminated for a minimum of 90 minutes. When AC power is restored, the LLCPC series driver switches the system back to the Normal Mode and resumes battery charging.

TESTING AND MAINTENANCE

Pressing the LCTS simulates an AC power failure and forces the system into the Emergency Mode. Only the emergency LED lamp (s) will be illuminated. Testing may also be performed by opening circuit breaker powering the system.

Initial Testing – Allow the unit to charge for approximately 1 hour, then press the LCTS to conduct a short test. Allow a 24 hour charge before conducting a 1 ½ hour test.

Monthly – Ensure that the LCTS is illuminated. Conduct a 30 second test by depressing the LCTS

Annually – Ensure that the LCTS is illuminated. Conduct a 1 ½ hour test by opening circuit breaker controlling the LLCPC series driver(s) to be tested.

Written records of testing shall be kept on file for inspection by the authority having jurisdiction.

LLCP-C Series System Coordination Guidelines

These guidelines were developed to allow the lighting system Designer/Specifier to predict the operating performance levels of LED luminaires when powered by an electrically compatible LLCP-C series model. It is ultimately the responsibility of the Designer/Specifier to ensure that the as installed system delivers code-compliant path of egress illumination.

1) Determine Electrical Compatibility

- A) Verify that the Luminaire LED Driver, where applicable, is Class 2 compliant.
- B) Verify that the Luminaire LED Lamp(s) have an operating voltage between 20Vdc and 50Vdc.
- C) Verify that the Luminaire LED Lamp(s) have a power rating equal to, or greater than, the emergency power rating of the LLCP-C series driver model under consideration.

Refer to Table 1 below.

TABLE 1

MODEL	EMERGENCY OUTPUT (CONSTANT)
LLCP-C series driver	5.0 WATTS or 10.0 WATTS or 13.0 WATTS

2) Calculate Lumen Output During Emergency Operation

- A) Access luminaire data by logging onto Design Lites Consortium (www.designlights.org).
- B) Select "Search the DLC Qualified Product List" on the DLC homepage.
- C) Enter manufacturer name and P/N of luminaire under consideration in the "search by keyword" text window.
- D) Select "Search" tab to open the "Qualified Products List".
- E) Determine luminaire Lumens per Watt efficacy in "Rated Data" specifications.
- F) Multiply luminaire Lumens per Watt by Emergency Output of the LLCP-C series model under consideration.

Refer to Table 1 above.

This figure is the Lumens available from the luminaire during emergency operation.

3) Determine Suitability of Means of Egress Lighting Levels

- A) Using industry standard lighting design software, along with IES files for the luminaire under consideration, verify that the as installed available Lumens (as calculated in 2F above) are sufficient to meet Code-compliant path of egress illumination levels.

While the LLCP-C series driver has been found compliant with the requirements of UL Standard 924, it is ultimately the responsibility of the Designer/Specifier to assure the as-installed system delivers code-compliant path of egress illumination in accordance with Federal, State or local municipal requirements.